


## ■ Direct Type Relief Valves

This valve is used in a hydraulic circuit to prevent damage due to over pressure and to adjust the maximum circuit pressure of small capacity.

### ■ Specifications

Model Numbers		Max. Operating Pressure MPa (PSI)	Pres. Adj. Range MPa (PSI)	Max. Flow L/min (U.S.GPM)	Approx. Mass kg (lbs.)	
Threaded Connection	Sub-plate Mounting				DT type	DG type
DT-02-*-22*	DG-02-*-22*	21 (3050)	Note)	16 (4.23)	1.5 (3.3)	1.5 (3.3)

Note: Refer to the Model Number Designation.

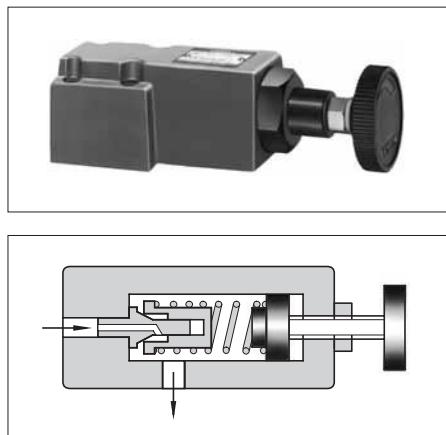

### ■ Model Number Designation


F-	D	T	-02	-B	-22	*
Special Seals	Series Number	Type of Mounting	Valve Size	Pres. Adj. Range MPa (PSI)	Design Number	Design Standards
<b>F:</b> Special Seals for Phosphate Ester Type Fluids (Omit if not required)	<b>D:</b> Direct Type Relief Valves	<b>T:</b> Threaded Connection  <b>G:</b> Sub-plate Mounting	<b>02</b>	<b>B:</b> ★-7 (★-1020) <b>C:</b> 3.5-14 (510-2030) <b>H:</b> 7-21 (1020-3050)	<b>22</b>	<b>None:</b> Japanese Std. "JIS" <b>80:</b> European Design Std. <b>90:</b> N. American Design Std.
					<b>22</b>	<b>None:</b> Japanese Std. "JIS" and European Design Std. <b>90:</b> N. American Design Std.

★ Refer to the Minimum Adjustment Pressure Characteristics.

### ■ Instructions

- To adjust the pressure, loosen the lock nut and turn the handle slowly clockwise for higher pressures or anti-clockwise for lower pressures. After adjustments, do not forget to tighten the lock nut.
- Piping of the tank line should not be connected to any tank line of the other valves, but connected directly to the reservoir.

### Graphic Symbol

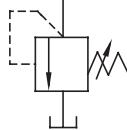

### ■ Attachment

#### ● Mounting bolts


Valve Model Numbers	Socket Head Cap Screw			Qty.
	Japanese Std. "JIS" and European Design Std.		N. American Design Std.	
DG-02	M5 × 45 Lg.		No.10-24 UNC × 1-3/4 Lg.	4

### ■ Sub-plate


Valve Model Numbers	Japanese Standard "JIS"		European Design Standard		N. American Design Standard		Approx. Mass kg (lbs.)
	Sub-plate Model Numbers	Thread Size	Sub-plate Model Numbers	Thread Size	Sub-plate Model Numbers	Thread Size	
DG-02	DGM-02-20	Rc 1/4	DGM-02-2080	1/4 BSP.F	DGM-02-2090	1/4 NPT	0.7 (1.5)

- Sub-plates are available. Specify the sub-plate model number from the table above. When sub-plates are not used, the mounting surface should have a good machined finish.
- The sub-plates are those for remote control relief valves. For dimensions, see page 204.


## ■ Min. Adjustment Pressure

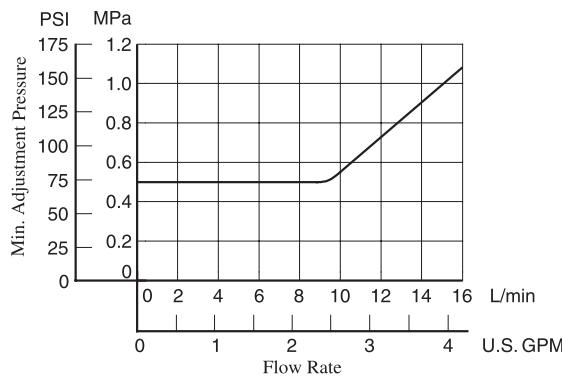


## ■ Nominal Override Characteristics

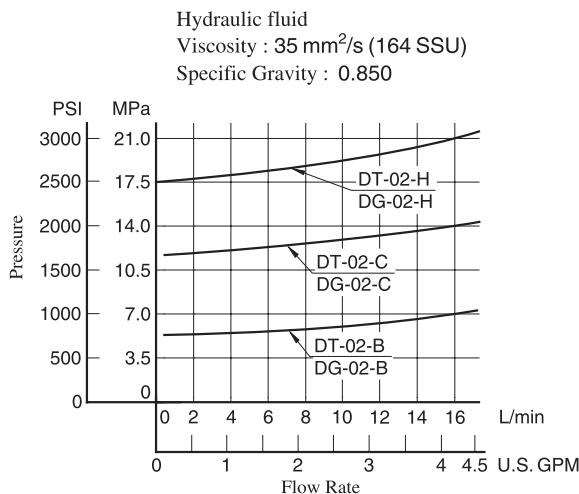

DT-02-\*\*-22/2280/2290

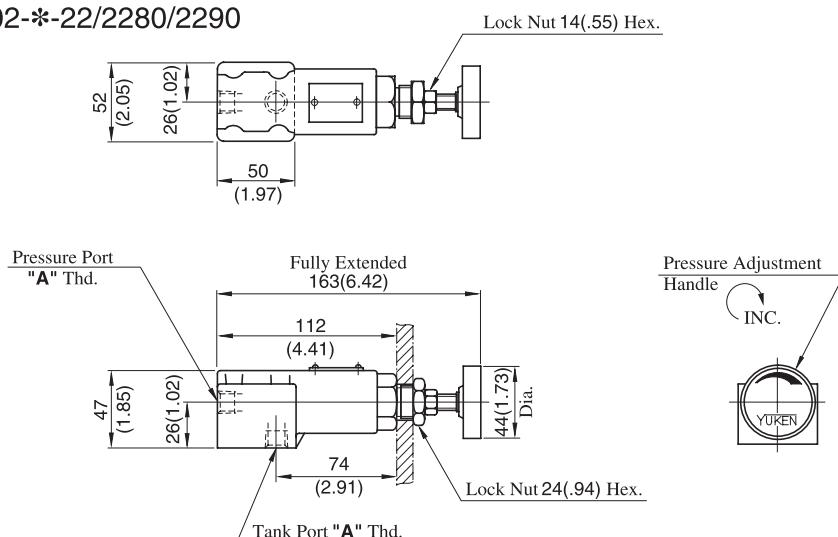


Model Numbers	"A" Thd.
DT-02-**-22	Rc 1/4
DT-02-**-2280	1/4 BSP.F
DT-02-**-2290	1/4 NPT

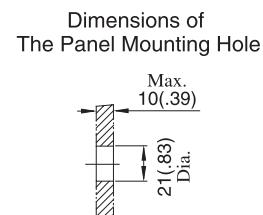

DIMENSIONS IN  
MILLIMETRES (INCHES)

DG-02-\*\*-22/2290

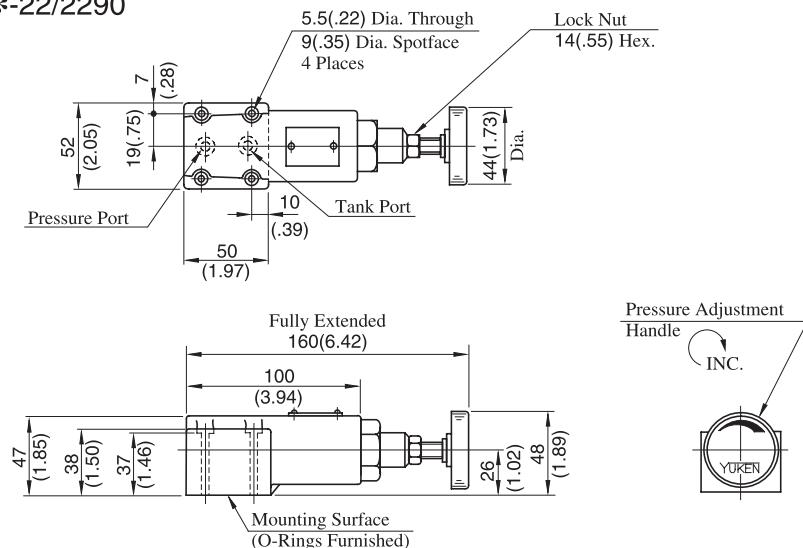

Note: For dimensions of the valve mounting surface, see the dimensional drawing (page 204) of the sub-plate used together.


C

Direct Type  
Relief Valves

**■ Spare Parts List**

DT-02-\*-22/2280/2290

DG-02-\*-22/2290

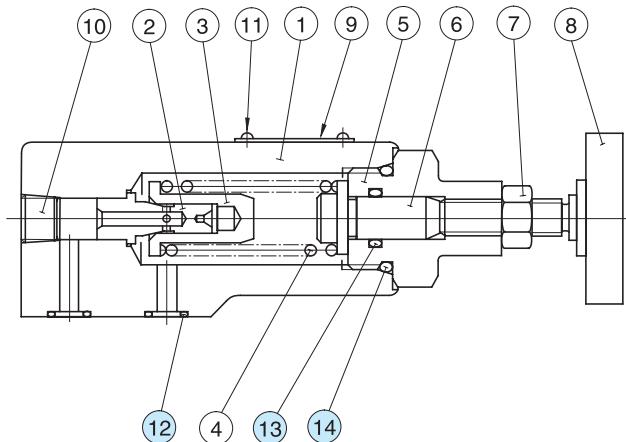**● List of Seals**

Item	Name of Parts	Part Numbers	Qty.	Remarks
12	O-Ring	SO-NB-P9	2	Use only for DG-02
13	O-Ring	SO-NA-P12	1	_____
14	O-Ring	SO-NB-P22.4	1	_____

Note: When ordering the seals, please specify the seal kit number from the table below.

**● List of Seal Kits**

Valve Model Numbers	Seal Kit Numbers
DT-02	KS-DT-01-22
DG-02	KS-DG-02-22